

PLATOWOOD® Profiles Platowood	Face cover	Platowood Fraké	Platowood Poplar	Platowood Spruce	
CLADDING (mm)					
Platonium 01 (channelsiding)					
18 x 90	75 + 3	x	x	x	
18 x 115	101 + 3	x	x	x	
18 x 140	125 + 4	x	x	x	
18 x 185	170 + 5	x		x	
Platonium 02 (shiplap channelsiding)					
18 x 115	101 + 3	x	x	x	
18 x 140	125 + 4	x	x	x	
18 x 185	170 + 5	x		x	
Platonium 03 (shiplap-half shiplap)					
18 x 140	125 + 4	x	x	x	
Platonium 04 (feather edge)					
9/20 x 140	125 + 4	x		x	
9/20 x 185	170 + 5	x		x	
13/26 x 185	170 + 5	x		x	
Platonium 05 (smooth)					
18 x 52		x	x	x	
18 x 66		x	x	x	
18 x 90		x	x	x	
18 x 115		x	x	x	
18 x 140		x	x	x	
18 x 185		x		x	
27 x 140		x		x	
40 x 140		x		x	
Platonium 07 (rhombus)					
18 x 66		x	x	x	
18 x 90		x	x	x	
18 x 115		x	x	x	
18 x 140		x	x	x	
Platonium 10 (castellated)					
27 x 140	129 + 4	x		x	
Other profiles					
upon request					
BACKING WOOD					
Platonium 05					
18 x 52				x	
18 x 66				x	
Platonium 14					
27 x 52				x	
27 x 66				x	
FINISHES					Maintenance Interval
Natural Color Stain (brushed surfaces)		x		x	3 - 5 years (brushed surfaces)
Natural Color Oil + Sunprimer		x		x	First maintenance after 2 years, then an interval of 3 years.
Weathered Color Stain (pre-greying)		x		x	none (is replaced by the natural greying)
Weathered Color Oil (pre-greying)		x	x	x	none (is replaced by the natural greying)
Burned Wood Oil + Sunprimer		x		x	First maintenance after 3 years, then an interval of 5 years.
Color (RAL-color)		x		x	3 - 5 years (brushed surfaces)
FireProtect - Salt		x			Finish with a transparent coating. Coating has a maintenance interval of approx. 10 years.
FireProtect - Salt			x	x	Finish with sealer + colored stain. Stain needs maintenance.
FireProtect - Polymere		x	x	x	Maintenance interval depends on chosen stain.
					none