










PLATOWOOD® Profiles Platowood	Face cover	Platowood Fraké	Platowood Poplar	Platowood Spruce		
CLADDING (mm)						
Platonium 01 (channelsiding)						
18 x 90	75 + 4	x	x	x		
18 x 115	101 + 4	x	x	x		
18 x 140	125 + 4	x	x	x		
18 x 185	170 + 4	x		x		
Platonium 02 (shiplap channelsiding)						
18 x 115	101 + 4	x	x	x		
18 x 140	125 + 4	x	x	x		
18 x 185	170 + 4	x		x		
Platonium 03 (shiplap-half shiplap)						
18 x 140	125 + 4	x	x	x		
Platonium 04 (feather edge)						
9/20 x 140	125 + 4	x		x		
9/20 x 185	170 + 5	x		x		
13/26 x 185	170 + 5	x		x		
Platonium 05 (smooth)						
18 x 52		x	x	x		
18 x 66		x	x	x		
18 x 90		x	x	x		
18 x 115		x	x	x		
18 x 140		x	x	x		
18 x 185		x		x		
27 x 140		x		x		
40 x 140		x		x		
Platonium 07 (rhombus)						
18 x 66		x	x	x		
18 x 90		x	x	x		
18 x 115		x	x	x		
18 x 140		x	x	x		
Platonium 10 (castellated)						
27 x 140	129 + 4	x		x		
Other profiles						
upon request						
BACKING WOOD						
Platonium 05						
18 x 52				x		
18 x 66				x		
Platonium 14						
27 x 52				x		
27 x 66				x		
FINISHES					Maintenance Interval	
Natural Color Stain (brushed surfaces)		x		x	3 - 5 years (brushed surfaces)	
Natural Color Oil + Sunprimer		x		x	First maintenance after 2 years, then an interval of 3 years.	
Weathered Color Stain (pre-greying)		x		x	none (is replaced by the natural greying)	
Weathered Color Oil (pre-greying)		x	x	x	none (is replaced by the natural greying)	
Burned Wood Oil + Sunprimer		x		x	First maintenance after 3 years, then an interval of 5 years.	
Color (RAL-color)		x		x	3 - 5 years (brushed surfaces)	
FireProtect - Salt		x			Finish with a transparent coating. Coating has a maintenance interval of approx. 10 years.	
FireProtect - Salt			x	x	Finish with sealer + colored stain. Stain needs maintenance. Maintenance interval depends on chosen stain.	
FireProtect - Polymere		x	x	x	none	